

## How to set your PC to Boot From the CD Drive

Phoenix - AwardBIOS v6. 00PG An Energy Star Ally  
Copyright (C) 1984-2002, Phenix Technologies, LTD


W6570MS V3.9 110703 10:26:03

**Memory Mode : Dual Channel**  
DRAM CLock For DDR 266

Press **DEL** to enter SETUP, **<F8>** to Enter Boot Menu  
11/07/2003-nVidia-nForce-6A61BM49C-00


## Step One

Turn your PC on. The first screen should give you similar option to the ones above. Press either button.

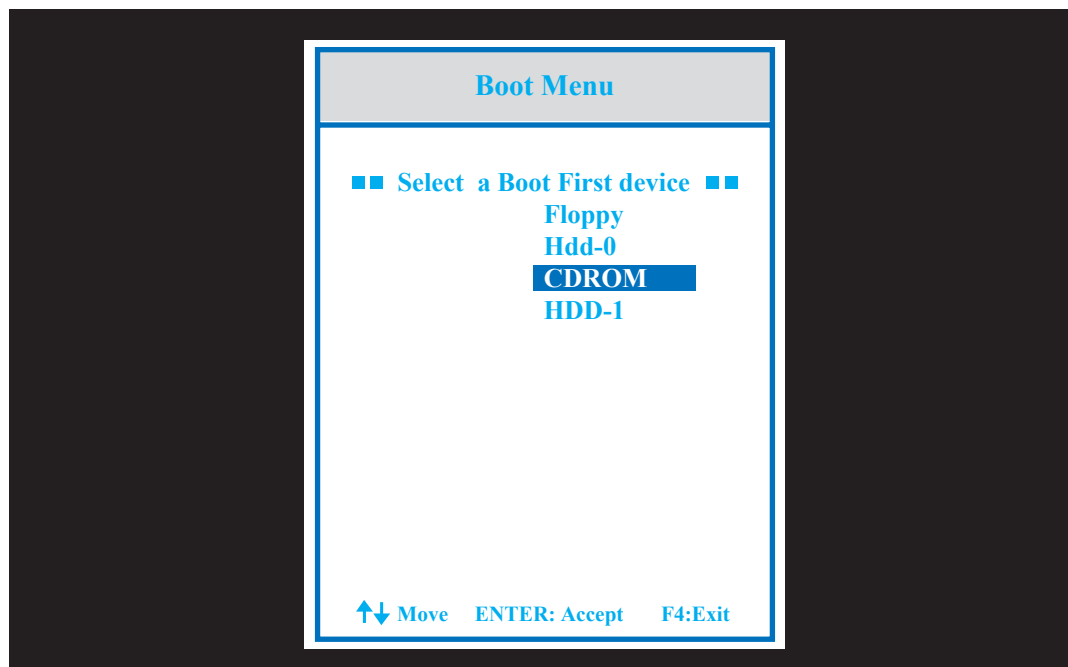


## Step Two

On the Enter Boot Menu Screen, choose CDROM or similar, (if this option is not available go into Setup).

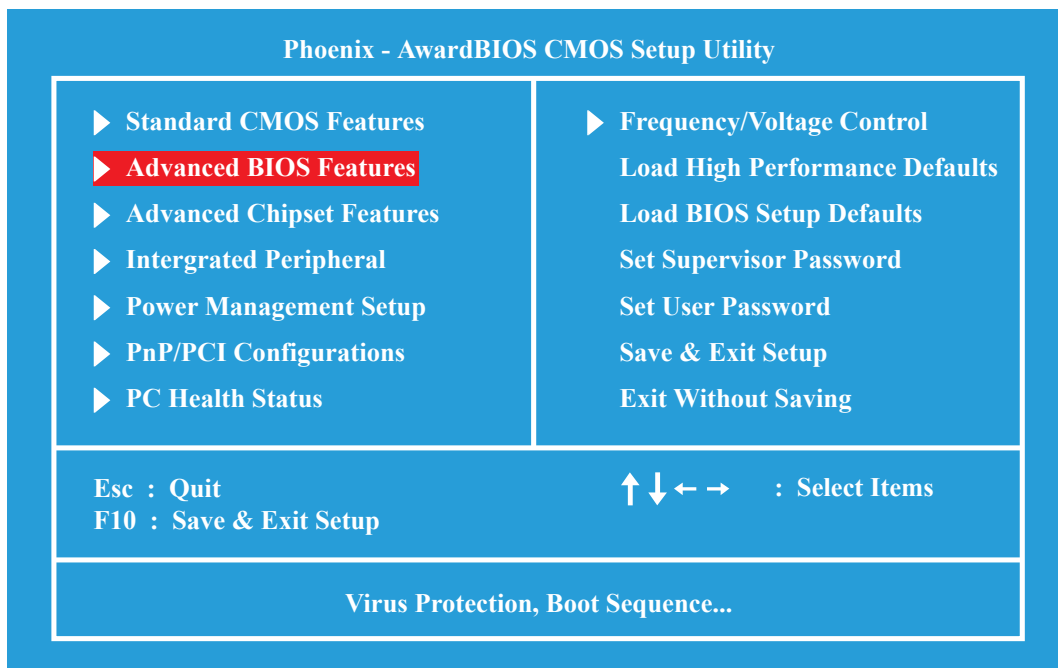


### Step Three

In Setup/BIOS use the arrow keys on your keyboard to highlight Advanced BIOS Features and press Enter.

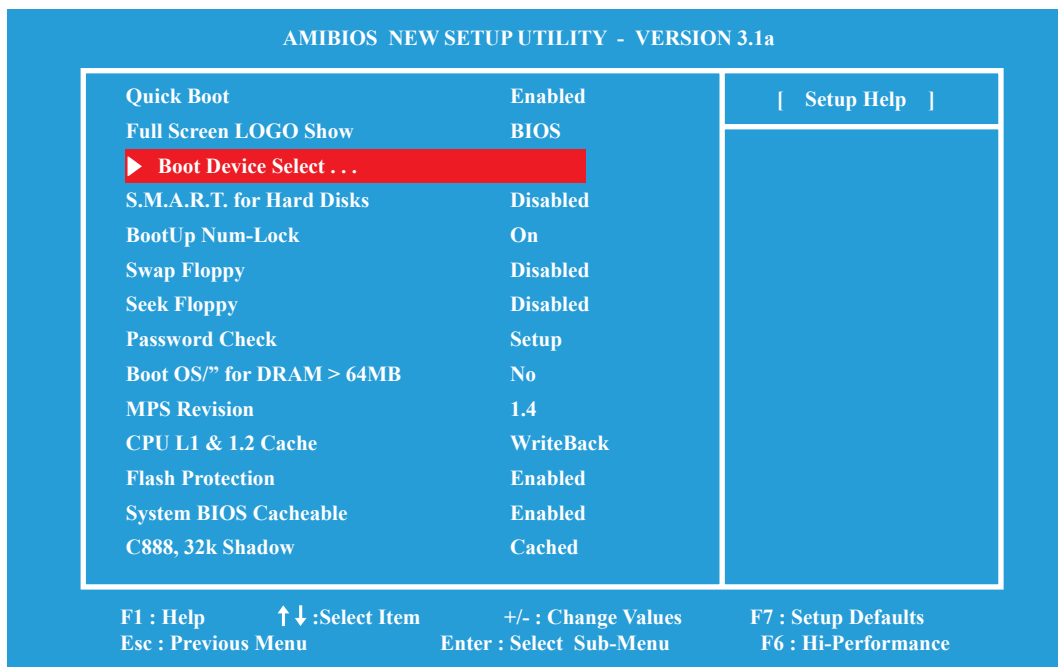

### Step Four

With AMIBIOS highlighted Boot Device Select and hit Enter Key and choose CDROM. (next Phoenix BIOS).

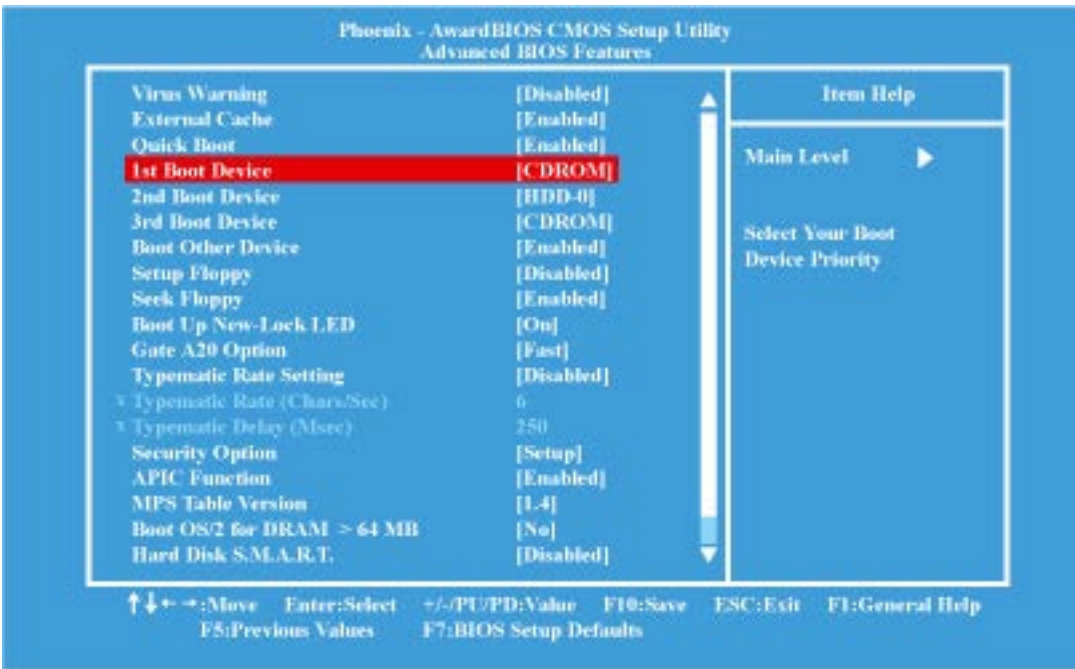


**Step Five**

With Pheonix highlighted First Boot Device and using the PageUp or PageDown keys change it to CDROM.



**Step Six**

Press the ESC key to go to the main screen and highlight... Save and Exit Setup.

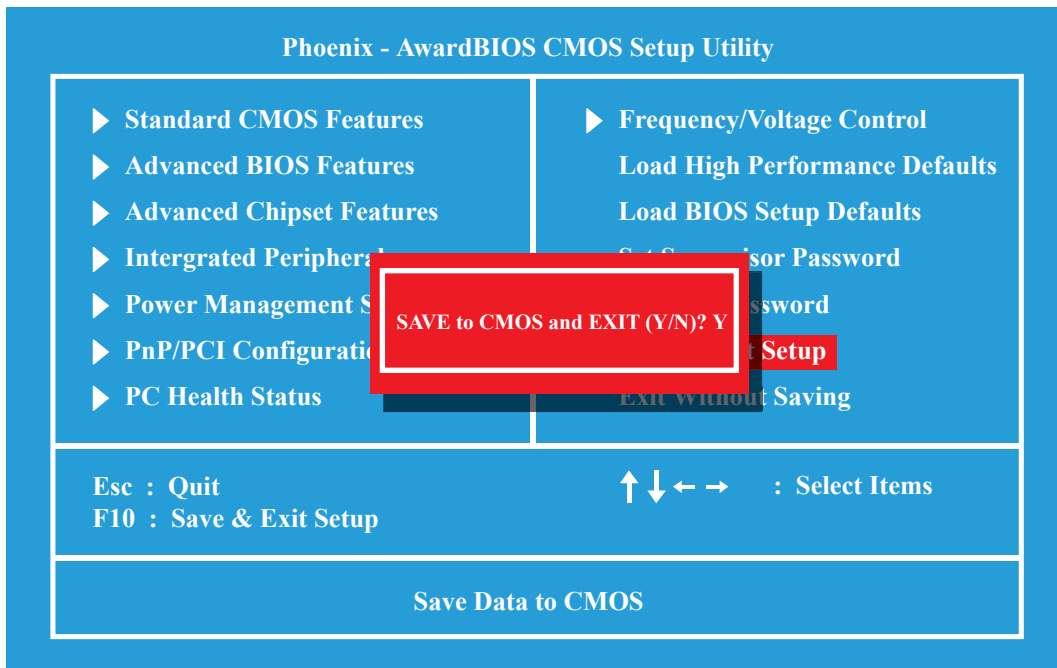

## Step Seven

Press the Y key and then the Enter Key to finish. Your PC will now reboot.